

JEWELRY MIRROR IS SHIPPED "UNLOCKED". PLEASE USE CARE AND GENTLY USE LIGHT FORCE WHEN OPENING DOOR FOR FIRST TIME. HINGES WILL LOOSEN AS DOOR IS OPENED AND CLOSED. KEY IS INSIDE THE CABINET.






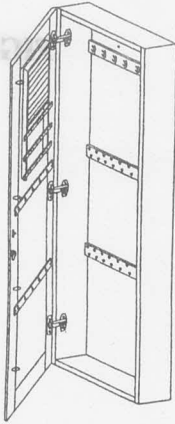
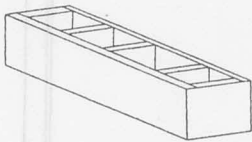
STYLE NO: VM5060 – MEDIUM OAK
 VM5061 – BURGUNDY CHERRY
 VM5062 – FROSTY WHITE
 VM5063 - NATURAL

SOUTHERN ENTERPRISES INC.
 RELAX...If you can follow a few easy, step-by-step directions in order .YOU CAN ASSEMBLE THIS ITEM.

WALL-MOUNT JEWELRY MIRROR

PLEASE FIND HARDWARE IN RED POLYBAG BEFORE DISCARDING PACKING MATERIAL.

HARDWARE LIST			
(1) WOOD SCREW	2PCS	(3) KEY	2PCS
			
(2) PLASTIC ANCHOR	2PCS		
			

PART LIST			
(A) JEWELRY MIRROR	1PC	(B) WOOD BOX	1PC
			

ASSEMBLY INSTRUCTION

1. SELECT A SMOOTH, SOFT SURFACE TO PREVENT SCRATCHING FINISH.
2. YOU MAY NEED A PHILLIP SCREWDRIVER.
3. DRILL TWO HOLES ON WALL, THE DISTANCE BETWEEN TWO HOLES SHOULD MATCH THE

